


REAR VIEW

The interconnecting cable is a Standard "A" to "A" USB Cable.

Do not use a transfer cable.

RDM EC-7014f

The RDM EC-7011f can also be used, since images upload via the terminal.

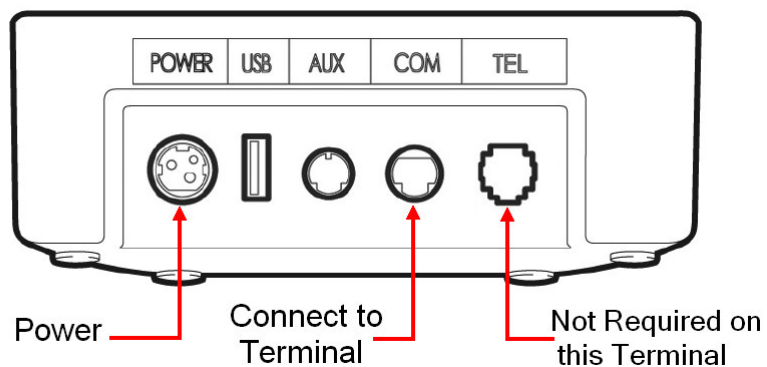

REAR VIEW

If the merchant is processing Check21,

the "Franking Assembly" **MUST NOT** be installed.