


Dejavoo X5

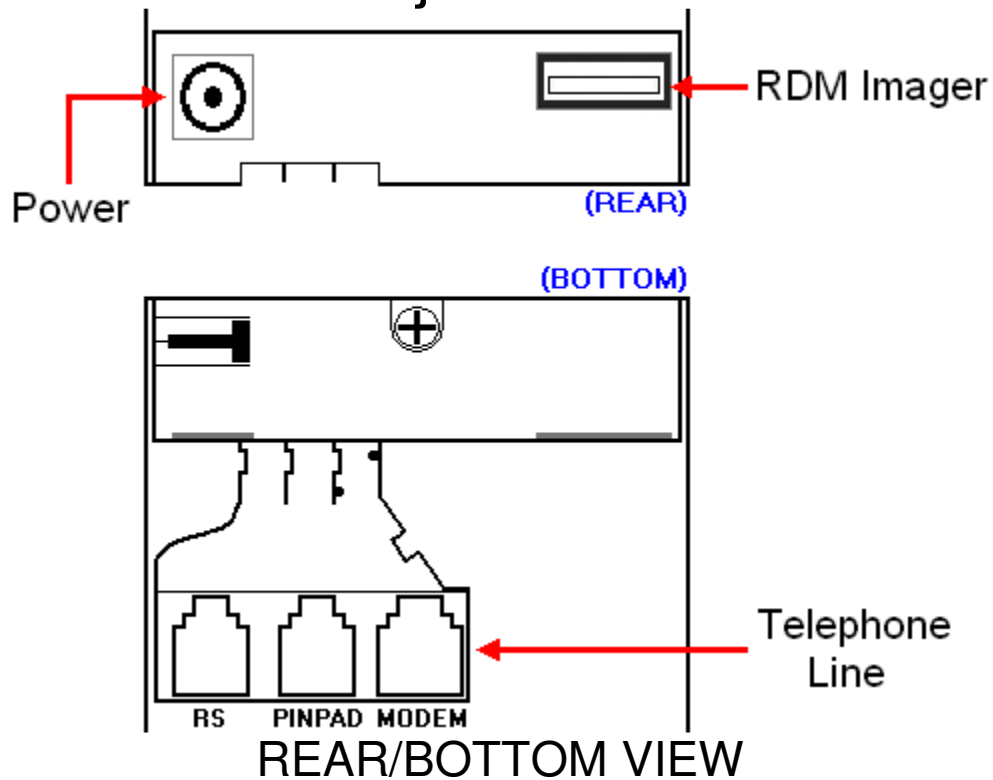

The interconnecting cable is a Standard "A" to "A" USB Cable.

Do not use a transfer cable.

RDM EC-6014f

The RDM EC-6011f can also be used, since images upload via the terminal.

