#### Magtek Mini MICR - Nurit/Tranz/Talento

This check is designed to configure a Magtek Mini MICR check reader to interface with a Nurit, Verifone Tranz, or Talento terminal.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved. \*THIS IS NOT A TEST CHECK\*

Magtek Mini MICR - Nurit/Tranz/Talento

This check is designed to configure a Magtek Mini MICR check reader to interface with a Nurit,

Insert this check, beginning on the left side of the reader, with the check face towards the inside

Please cut as close to the line as possible to ensure readability

## ·'·'0 156" 360 300 \$000 1···000 ·'

#### of the reader. After successful configuration, the green LED will blink 8 times. If at any point the LED turns red, repeat this process until successful configuration is achieved. \*THIS IS NOT A TEST CHECK\* Please cut as close to the line as possible to ensure readability

#### ··'·'O 156" 360 300 **:**000 1...000 ·'

## Magtek Mini MICR - Nurit/Tranz/Talento

This check is designed to configure a Magtek Mini MICR check reader to interface with a Nurit, Verifone Tranz, or Talento terminal. Insert this check, beginning on the left side of the reader, with the check face towards the inside

of the reader. After successful configuration, the green LED will blink 8 times. If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Verifone Tranz, or Talento terminal.

Please cut as close to the line as possible to ensure readability

## ·'·'O 156" 360 300 **:**000 1…000.'

# Magtek Mini MICR - Nurit/Tranz/Talento

This check is designed to configure a Magtek Mini MICR check reader to interface with a Nurit, Verifone Tranz, or Talento terminal. Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved. \*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

Item #: C-1 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

Item #: **C-1** 

Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

Item #: C-1 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

Item #: C-1 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

#### ı"ı"O 156" 360 300 **:**000 1...000 ı'