## Magtek Mini MICR - Hypercom/Equinox

This check is designed to configure a Magtek Mini MICR check reader to interface with Hyper-com/Equinox series terminals, including the integrated check reader on the Hypercom ICE 5700.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

,','O 164" 660 3401:000 2:::000;'

Item #: C-3 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

## Magtek Mini MICR - Hypercom/Equinox

This check is designed to configure a Magtek Mini MICR check reader to interface with Hyper-com/Equinox series terminals, including the integrated check reader on the Hypercom ICE 5700.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

"" "O 164 " 660 340 "000 2 " OOO"

Item #: C-3
Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

## Magtek Mini MICR - Hypercom/Equinox

This check is designed to configure a Magtek Mini MICR check reader to interface with Hyper-com/Equinox series terminals, including the integrated check reader on the Hypercom ICE 5700.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

Item #: C-3 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

.''.''O 164"660340:10002::'000.'

## Magtek Mini MICR - Hypercom/Equinox

This check is designed to configure a Magtek Mini MICR check reader to interface with Hyper-com/Equinox series terminals, including the integrated check reader on the Hypercom ICE 5700.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

Item #: C-3 Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

""" O 164" 660 340 1000 2 11000 i