## Magtek Mini MICR - Ingenico

This check is designed to configure a Magtek Mini MICR check reader to interface with an Ingenico terminal.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

For Technical Assistance Contact: 1-877-438-3249

Item #: C-18

Check: 1 of 1

© Paya Services 2018

Please cut as close to the line as possible to ensure readability

.''.''O 1 58" 640 200".000 2"00 1.''

## Magtek Mini MICR - Ingenico

This check is designed to configure a Magtek Mini MICR check reader to interface with an Ingenico terminal.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

For Technical Assistance Contact: 1-877-438-3249

Item #: C-18
Check: 1 of 1

© Paya Services 2018

Please cut as close to the line as possible to ensure readability

.'.'O 1 58" 640 200 1000 2 00 1.'

## Magtek Mini MICR - Ingenico

This check is designed to configure a Magtek Mini MICR check reader to interface with an Ingenico terminal.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Item #: **C-18**Check: 1 of 1

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

Please cut as close to the line as possible to ensure readability

.''.'O 1 58" 640 200:1000 2:::00 1.'

## Magtek Mini MICR - Ingenico

This check is designed to configure a Magtek Mini MICR check reader to interface with an Ingenico terminal.

Insert this check, beginning on the left side of the reader, with the check face towards the inside of the reader. After successful configuration, the green LED will blink 8 times.

If at any point the LED turns red, repeat this process until successful configuration is achieved.

\*THIS IS NOT A TEST CHECK\*

Check: 1 of 1

Item #: C-18

For Technical Assistance Contact: 1-877-438-3249

© Paya Services 2018

Please cut as close to the line as possible to ensure readability

.''.'O 1 58" 640 200 2000 2000 1.'