

Removing the Franking Assembly Printer (FAP)


P/N: 6000-6065

The franker cartridge creates a red ink stamp that defaces the front of each check with a message that says “Electronically Presented”. Franker can be purchased by contacting your solution provider or reseller.

I. To access the Franker Area:

Remove the front cover when you need to clear paper jams, replace the franker cartridge, or clean the image sensor.

1. Disconnect the power cord from the scanner.
2. Pull the insertion extensions forward.
3. Grasp the front and the back end of the front cover.
4. Gently pull the cover upwards until it detaches from the scanner.
5. Rotate the unit around to expose the back, that is where the Franking cartridge will be located.

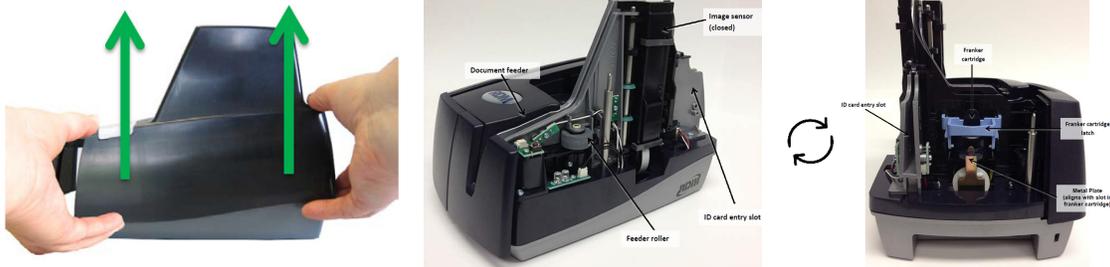

II. Removing the Franker Cartridge:

1. Remove the front cover, the franker cartridge is held in place by a Blue franker latch and a metal plate.
2. Lift the Blue franker latch.
3. Pull the franker cartridge out of the scanner by the franker tab.
4. Replace the scanner cover.

