

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 1 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

00353839004746

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 2 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

0041520017

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 3 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

00445135440023

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 4 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

00445134330025221616

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 5 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

❑❑❑445148330037543746

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 6 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

❑❑❑3738001821

## CR 600 Hypercom/Equinox

Item #: C-12

Check: 7 of 7

This set of checks is designed to configure the Verifone CR600 check reader to interface with a Hypercom/Equinox terminal.

Insert check 1 of 7, beginning on the left side of the reader, with the check face towards the inside of the reader. The display will flash "A" after successful insertion. Wait approximately 30 seconds and repeat this process with checks 2 through 7 in the same manner. After successful configuration, unplug the reader, the display should flash a series of numbers ending in 50 - then quickly flash 8 as the reader resets.

\*THIS IS NOT A TEST CHECK\*

Please cut as close to the line as possible to ensure readability

**For Technical Assistance**

**Contact: 1-877-438-3249**

**© Paya Services 2018**

❑❑❑35383900473838 5150